



Official Lane Maintenance and Capital Equipment Provider

DIRECT+
Conditioning System



ENVOY



AUTHORITY22®

Select Machine

Pattern Information

Date
Pattern Type
Pattern Difficulty
Pattern Designer
Pattern Volume (ml)

Surface Information

Surface Type
Surface Brand
Age

Pattern Parameters

Pattern Number
Pattern Name
Mode
Forward Speed
Start Cleaner Spray
Start Squeegee
Start Oiling
Split Pattern


Supplies Information

Lane Cleaner
Cleaner Mixture Ratio
Cleaner Transition Distance
Cleaner Spray End Distance
Lane Conditioner

Notes

Zone	1	2	3	4	5	6	7	8	
Zone End Distance	7.5	15.5	21	25.5	35	43			
Zone Ratio	L 6.6 : 1 R 6.6 : 1	L 6.5 : 1 R 6.5 : 1	L 6.8 : 1 R 6.8 : 1	L 7.9 : 1 R 7.9 : 1	L 8.1 : 1 R 8.1 : 1	L ### : 1 R ### : 1	L ### : 1 R ### : 1	L ### : 1 R ### : 1	Pattern Ratio by Volume
Zone Volume (ml)	7.17	7.43	4.50	3.54	6.81	0.00	0.00	0.00	7.10 : 1 7.10 : 1

ZONE	7 Pin Side														Board Number										10 Pin Side																				
	L1	L2	L3	L4	L5	L6	L7	L8	L9	L10	L11	L12	L13	L14	L15	L16	L17	L18	L19	C20	R19	R18	R17	R16	R15	R14	R13	R12	R11	R10	R9	R8	R7	R6	R5	R4	R3	R2	R1						
1	10	10	10	10	10	19	26	34	41	52	78	90	100	100	100	100	100	100	100	100	100	100	100	100	100	100	90	78	52	41	34	26	19	10	10	10	10	10	10	10	10	10	10		
2	10	10	10	10	10	18	26	34	41	50	75	87	97	97	97	97	97	97	97	97	97	97	97	97	97	97	87	75	50	41	34	26	18	10	10	10	10	10	10	10	10	10	10		
3	8	8	8	8	8	16	23	29	35	44	67	76	86	86	86	86	86	86	86	86	86	86	86	86	86	86	76	67	44	35	29	23	16	8	8	8	8	8	8	8	8	8	8		
4	5	5	5	5	5	16	22	28	34	43	66	75	84	84	84	84	84	84	84	84	84	84	84	84	84	84	75	66	43	34	28	22	16	5	5	5	5	5	5	5	5	5	5		
5	5	5	5	5	5	14	19	24	29	38	57	64	78	78	78	78	78	78	78	78	78	78	78	78	78	78	64	57	38	29	24	19	14	5	5	5	5	5	5	5	5	5	5		
6	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	
7																																													
8																																													

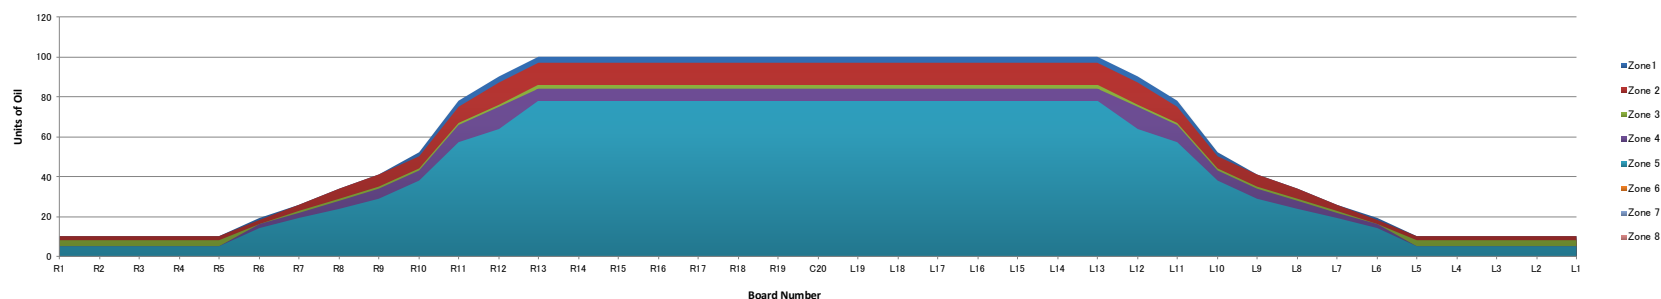

第45回実業団産業別

Crosswise Ratios (by units)

Zone 1			
Average	Ratio		
3L-7L Left = 15.0	6.6		
3R-7R Right = 15.0	6.6		
18L-18R Center = 100.0			

Zone 2			
Average	Ratio		
3L-7L Left = 14.8	6.5		
3R-7R Right = 14.8	6.5		
18L-18R Center = 97.0			

Zone 3			
Average	Ratio		
3L-7L Left = 12.6	6.8		
3R-7R Right = 12.6	6.8		
18L-18R Center = 86.0			

Zone 4			
Average	Ratio		
3L-7L Left = 10.6	7.9		
3R-7R Right = 10.6	7.9		
18L-18R Center = 84.0			

Zone 5			
Average	Ratio		
3L-7L Left = 9.6	8.1		
3R-7R Right = 9.6	8.1		
18L-18R Center = 78.0			

Zone 6			
Average	Ratio		
3L-7L Left = 0.0	#DIV/0!		
3R-7R Right = 0.0	#DIV/0!		
18L-18R Center = 0.0			

Zone 7			
Average	Ratio		
3L-7L Left = #DIV/0!	#DIV/0!		
3R-7R Right = #DIV/0!	#DIV/0!		
18L-18R Center = #DIV/0!			

Zone 8			
Average	Ratio		
3L-7L Left = #DIV/0!	#DIV/0!		
3R-7R Right = #DIV/0!	#DIV/0!		
18L-18R Center = #DIV/0!			

Crosswise Ratios (by ml)

Zone 1			
Average	Ratio		
3L-7L Left = 0.047	6.6		
3R-7R Right = 0.047	6.6		
18L-18R Center = 0.314			

Zone 2			
Average	Ratio		
3L-7L Left = 0.050	6.5		
3R-7R Right = 0.050	6.5		
18L-18R Center = 0.325			

Zone 3			
Average	Ratio		
3L-7L Left = 0.029	6.8		
3R-7R Right = 0.029	6.8		
18L-18R Center = 0.198			

Zone 4			
Average	Ratio		
3L-7L Left = 0.020	7.9		
3R-7R Right = 0.020	7.9		
18L-18R Center = 0.158			


Zone 5			
Average	Ratio		
3L-7L Left = 0.038	8.1		
3R-7R Right = 0.038	8.1		
18L-18R Center = 0.311			

Zone 6			
Average	Ratio		
3L-7L Left = 0.000	#DIV/0!		
3R-7R Right = 0.000	#DIV/0!		
18L-18R Center = 0.000			

Zone 7			
Average	Ratio		
3L-7L Left = 0.000	#DIV/0!		
3R-7R Right = 0.000	#DIV/0!		
18L-18R Center = 0.000			

Zone 8			
Average	Ratio		
3L-7L Left = 0.000	#DIV/0!		
3R-7R Right = 0.000	#DIV/0!		
18L-18R Center = 0.000			

The crosswise ratios are calculated by the average units of oil for boards 18L - 18R and divided by the average units of oil for board 3 - 7 left and right.

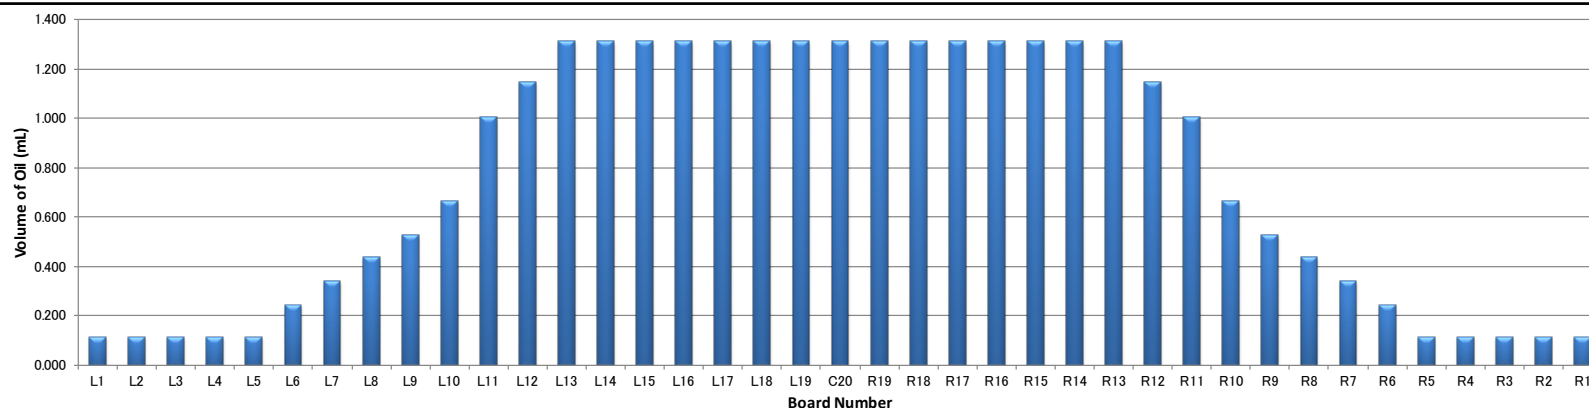

3L-7L:18L-18R	Ratio by Total Volume	18L-18R:7R-3R
7.10	1	7.10